

QUICK START GUIDE

Getting started with your Hotspot

Charging the Hotspot – When the Hotspot battery indicator shows a low battery, it is time to charge the Hotspot.

- 1. Plug the micro-USB connector of the Hotspot power cable (labelled A) into the micro-USB port on the front of the Hotspot (labelled A).
- 2. Plug the Hotspot power cable into an electrical socket.
- 3. Confirm that the battery is charged by turning on the Hotspot and checking that the device's home screen shows a full battery.
- 4. The Hotspot is ready to be used.

Turning on the Hotspot.

- 1. Hold down the power button for 3 seconds.
- 2. When the device is on you will see the home screen light up.

Connect the Hotspot to a Chromebook.

- 1. Turn on the Hotspot.
- 2. Click the Clock display in the lower right bottom of the screen.
- 3. Click Settings.
- 4. In Network Settings, select Wi-Fi.
- 5. A list of available networks display. Select the Wi-Fi name of the Hotspot.
- 6. Note: Press the Power button on the Hotspot several times until the Hotspot name appears on the Hotspot LCD display.
- 7. Enter the password of the Hotspot.
 - Note: Press the Power button on the Hotspot again. The Hotspot password appears on the Hotspot LCD display.

Getting started with the Chromebook.

- 1. Turn on the Chromebook.
 - a) Plug the micro-USB connector of the Chromebook power cable (labelled B) into the micro-USB port (labelled B) on the Chromebook.
 - b) Plug the Chromebook power cable into a power outlet.
 - c) Press the power button in the top right corner of the keyboard.
- 2. Sign in as a guest.
 - a) Click on the Browse as Guest button in the lower left bottom of the screen.
 - Note: Your Usage will not appear in browser history and won't leave other
 traces like cookies after you sign out. Files you download won't be saved. Save
 your files to a USB, or to a cloud document service like OneDrive, and Google
 Drive.
- 3. Sign out as a guest.
 - a) Click the Clock display in the lower right bottom of the screen.
 - b) Click Exit Guest.
- 4. Shut off Chromebook.
 - a) Press the power button in the lower left bottom of the screen.
 - b) Click Shut Down.

Chromebook help

Go to https://support.google.com/chromebook/?hl=en#topic=3399709 in your internet browser.



QUICK START GUIDE

Getting started with the Printer

- 1. Turn on the Printer The print B&W and color print cartridges are installed.
 - a) Plug the printer power cable connector (labelled C) into the power cable port (labelled C) of the Printer.
 - b) Plug the printer power cable into a power outlet.
 - c) A yellow light will display on the left side of the printer.
 - d) Lift the lid of the printer and press the power button.
- Connect the Printer to the Chromebook.
 - a) Plug the USB-B (square plug) (labelled D) end of the printer cable into the printer cable port (labelled D) of the printer.
 - b) Plug the USB plug (flat plug) (labelled D) end of the printer cable into the USB port (labelled D) on your Chromebook.
- 3. Install the Printer on the Chromebook. (The settings will keep until you disconnect the printer cable from the Chromebook)
 - a) Turn on the Chromebook.
 - b) Sign in the Chromebooks as a Guest.
 - c) Click the clock display in the lower right bottom of the screen.
 - d) Click Settings.
 - e) Click Advanced.
 - f) Click Print and Scan.
 - g) Printer list will open. The printer that you connected to the Chromebook (HP Office Jet 200) will be listed.
 - h) Click Save.
- 4. Print a document.
 - a. To print the page, document, or image you are viewing, press Ctrl + p.
 - b. Next to Destination, select the down arrow.
 - c. Click See More.
 - d. Select your printer.
 - e. Select Print.

The USB Thumb Drive included in this kit is yours to keep.

Email questions to libraryebooks@glendaleaz.com

